

Elmo Interactive Toolbox (EIT) User Guide

Elmo Interactive Toolbox (EIT)

Quick Start

- Open the **Utilities** folder on the desktop and click on **Elmo Interactive Toolbox**.
- When the Document Camera is connected, EIT will start in the Document Camera mode, otherwise it will start in the Whiteboard mode.
- EIT stays in full screen, but selecting the **PC Operation button (mouse icon)** on the outermost ring switches to the PC to allow for access to other application windows, like Zoom.
- To **exit**, press the red X on the side toolbar, select Yes when prompted (if it has disappeared, simply move the cursor over the area to make it reappear).

Explanation of Buttons

Moveable Navigation Toolbar - Press+Hold to move anywhere on the screen



Outermost ring - holds buttons for various operation modes (starting at top-left, going clockwise):

- PC Operation** - switches screen to the PC for access to other applications
- Document Camera** - shows Doc Cam or webcam image
- PC Annotation** - shows PC screen to allow for annotation over other applications
- Whiteboard** - white screen for writing
- Teaching Material Folder** - where captured images, recordings, and preinstalled backgrounds are stored

Innermost ring - holds buttons for various tools used across all operation modes (starting at top-left, going clockwise):

- Capture** - capture entire screen to save in Teaching Material Folder to use later
- Pencil** - drawing tools to write on screen
- Highlighter** - tool to highlight anywhere on screen
- Erase** - erase content added to the screen from pencil markings to sticky notes or entire screen, minus the operation modes image
- Select** - to select objects on the screen
- Undo** - undo last action
- Record video** - press to record screen, press again to stop

- Mode button** - returns the outermost ring to show the various operation modes available

Side Toolbar (disappears when utilizing the screen, move cursor over to reappear)



- Exit** - exit out of Elmo Interactive Toolbox
- Record video settings** - additional recording settings
- Insert image** - insert an image from computer files
- Sticky notes** - place sticky notes on the screen
- Capture selected area** - capture and save only portion of the screen
- Document Camera settings** - additional image settings
- Camera switching** - switch from camera sources (doc cam, webcam)

Bottom Toolbar



- Moving dial** - returns the navigation toolbar to bottom-left corner
- Highlight** - bring attention to portion of the screen
- Mask** - hide portion or whole image
- Rotate images** - flips image 180°
- Freeze** - freezes image
- Zoom out** - zooms out on image while in Document Camera mode
- Zoom in** - zooms in on image while in Document Camera mode
- Decrease brightness** - lowers brightness while in Document Camera mode
- Increase brightness** - raises brightness while in Document Camera mode