Lectern diagram

Smart Classroom lecterns all feature installed PCs and standard peripheral equipment. Some are height-adjustable, but not all. While the exact equipment varies a bit room-to-room, this diagram shows a typical lectern.

web camera

lectern monitor

gooseneck microphone

reading light

control panel

document camera (folding model pictured)

cables & power cubby

keyboard

lectern height control (newer lecterns only)

mouse

PC, Blu-ray player, other hardware
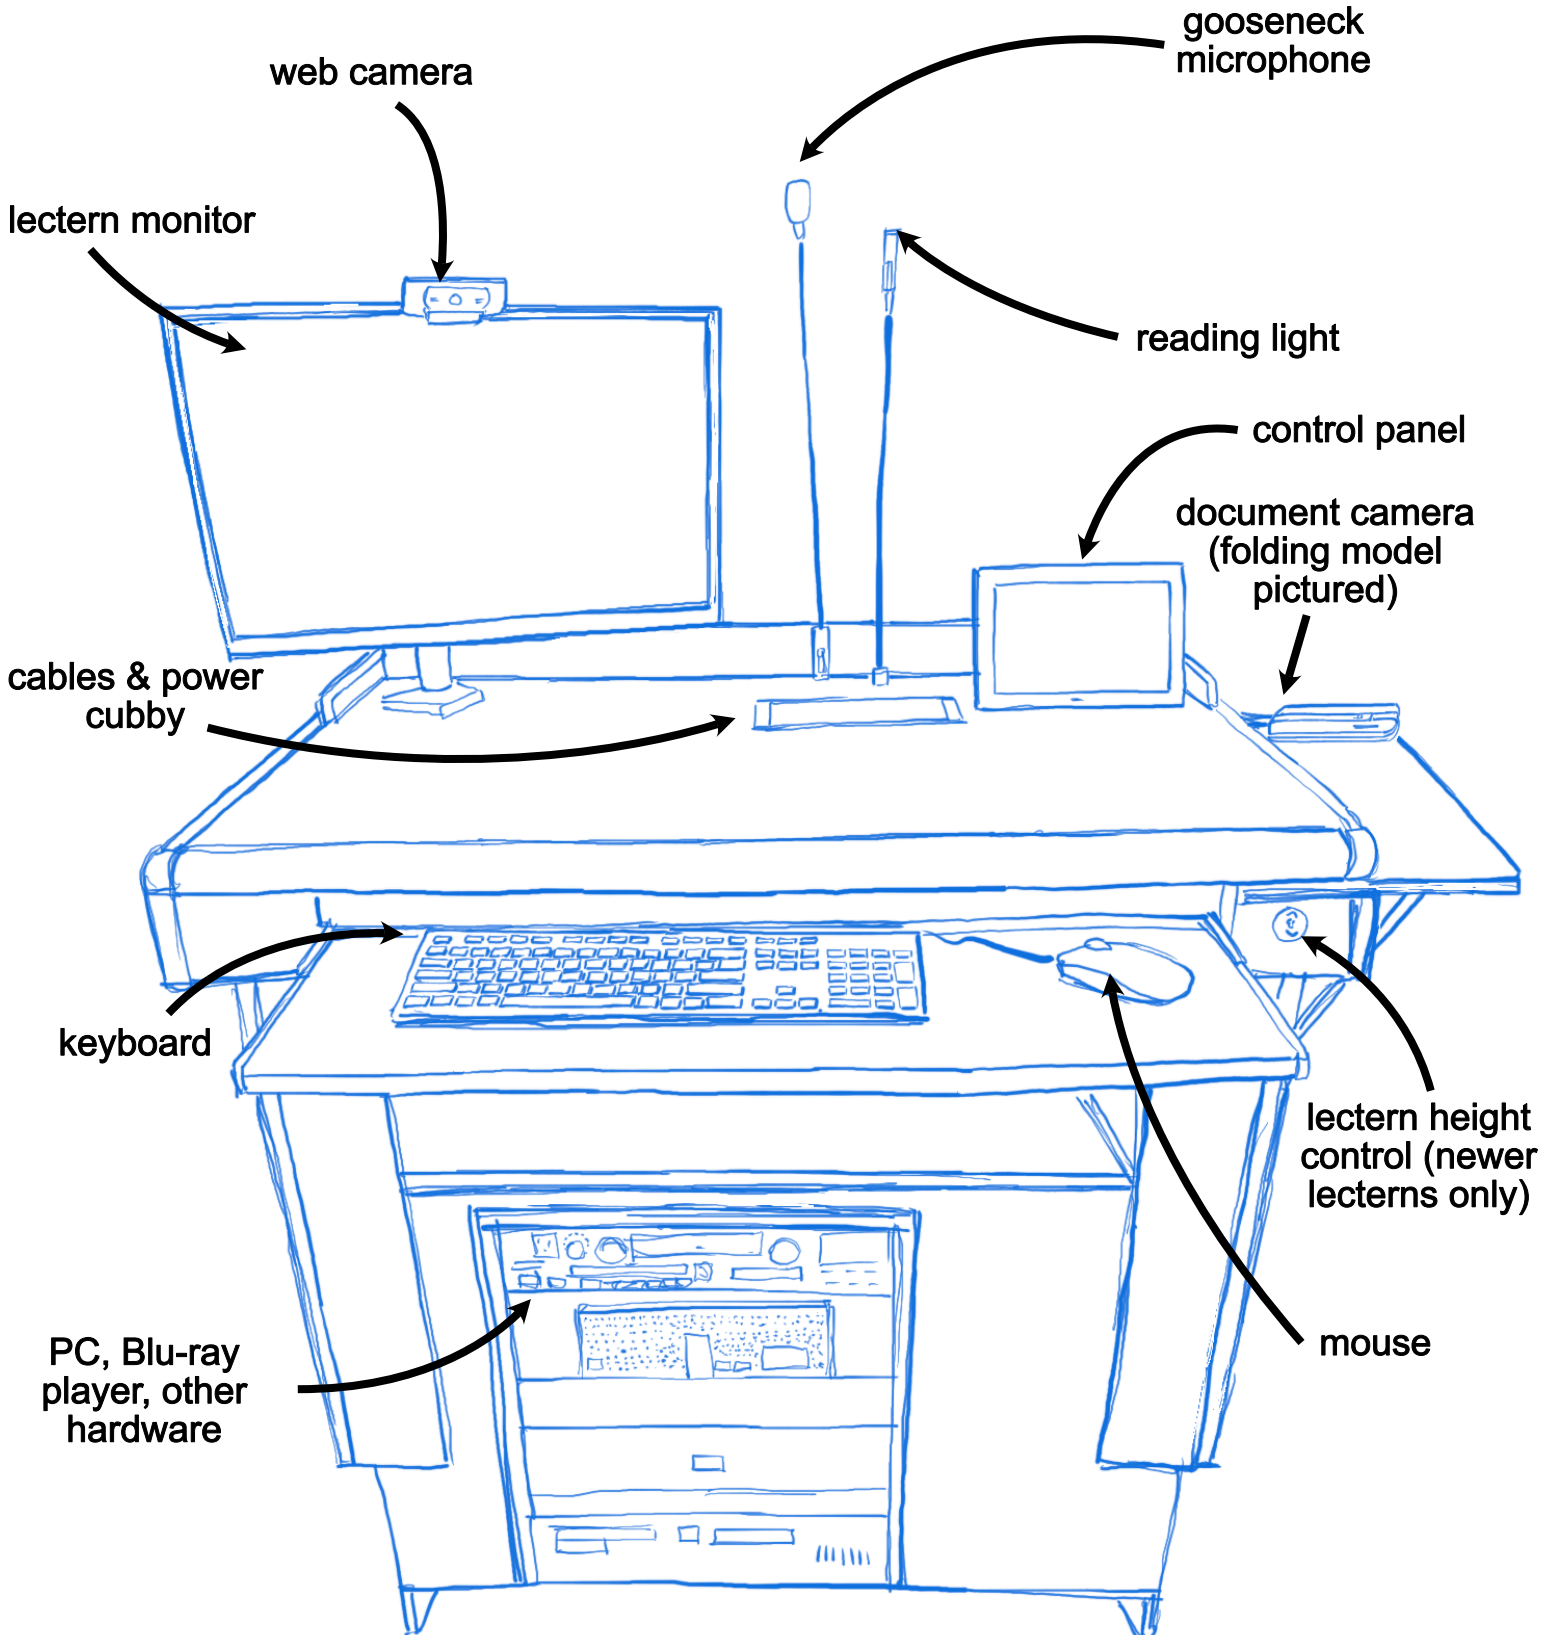
Streaming / Recording

1. Use the control panel to turn on system, adjust volume, choose PC as source*

2. Login to the PC with UCInetID and password

3. Check speaker, microphone, and video settings

Speaker 🔊)   **Same as System** -or- **Extron HDMI [Intel(R) Display Audio]**

Microphone 🎤   If using wireless lapel or handheld microphone: **Line-In**

                   Otherwise: **Same as System** -or- **USB PnP Sound Device**

Video 🎥   **Live Streamer CAM 313**

Need Help?

Dial **48833** from the phone on the classroom wall for our help line

(949) 824-8833 / smartclassrooms@uci.edu / classrooms.uci.edu

Classroom Technologies
classrooms.uci.edu

Document Camera
classrooms.uci.edu/quickstart/#doc-cam

YuJa
classrooms.uci.edu/quickstart/#yuja

Zoom
classrooms.uci.edu/quickstart/#zoom

* For streaming or recording, choose PC for access to the classroom microphone(s), speakers, web camera, and document camera. To use a laptop, tablet, etc. launch a Zoom meeting on the PC and join from your other device so you can share your screen